





SENSOR AND ELEVATION TABLE		
EL ELEVATION	DISTANCE BETWEEN POINTS	SET POINT DESCRIPTION
338.08'		INVERT IN
-		BACK UP PUMPS START
	-	SENSOR SPACING
-		BACK UP PUMPS STOP
	-	SENSOR SPACING
-		BACK UP HL ALARM
337.57'		HIGH LEVEL ALARM
	0.50'	SENSOR SPACING
337.07'		LAG PUMP START
	0.50'	SENSOR SPACING
336.57'		LEAD PUMP START
	2.50'	SENSOR SPACING
334.07'		PUMP STOP
	1.50'	DISTANCE TO FLOOR
332.57'		FLOOR ELEVATION

 NOTE: ALL DIMENSIONS AND ELEVATIONS SHOWN ARE NOMINAL DIMENSIONS. IT IS THE RESPONSIBILITY OF THE ON-SITE CONTRACTOR OR ROMTEC UTILITIES CUSTOMER (NOT ROMTEC UTILITIES) TO VERIFY THE ACCURACY OF ANY CRITICAL DIMENSIONS OR ELEVATIONS PRIOR TO SETTING OR INSTALLING ANY EQUIPMENT.

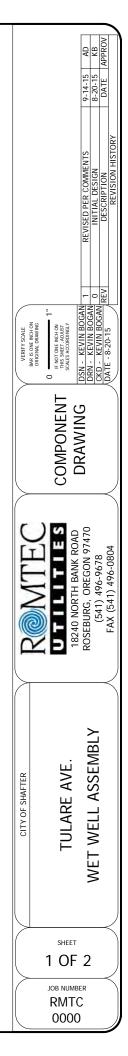

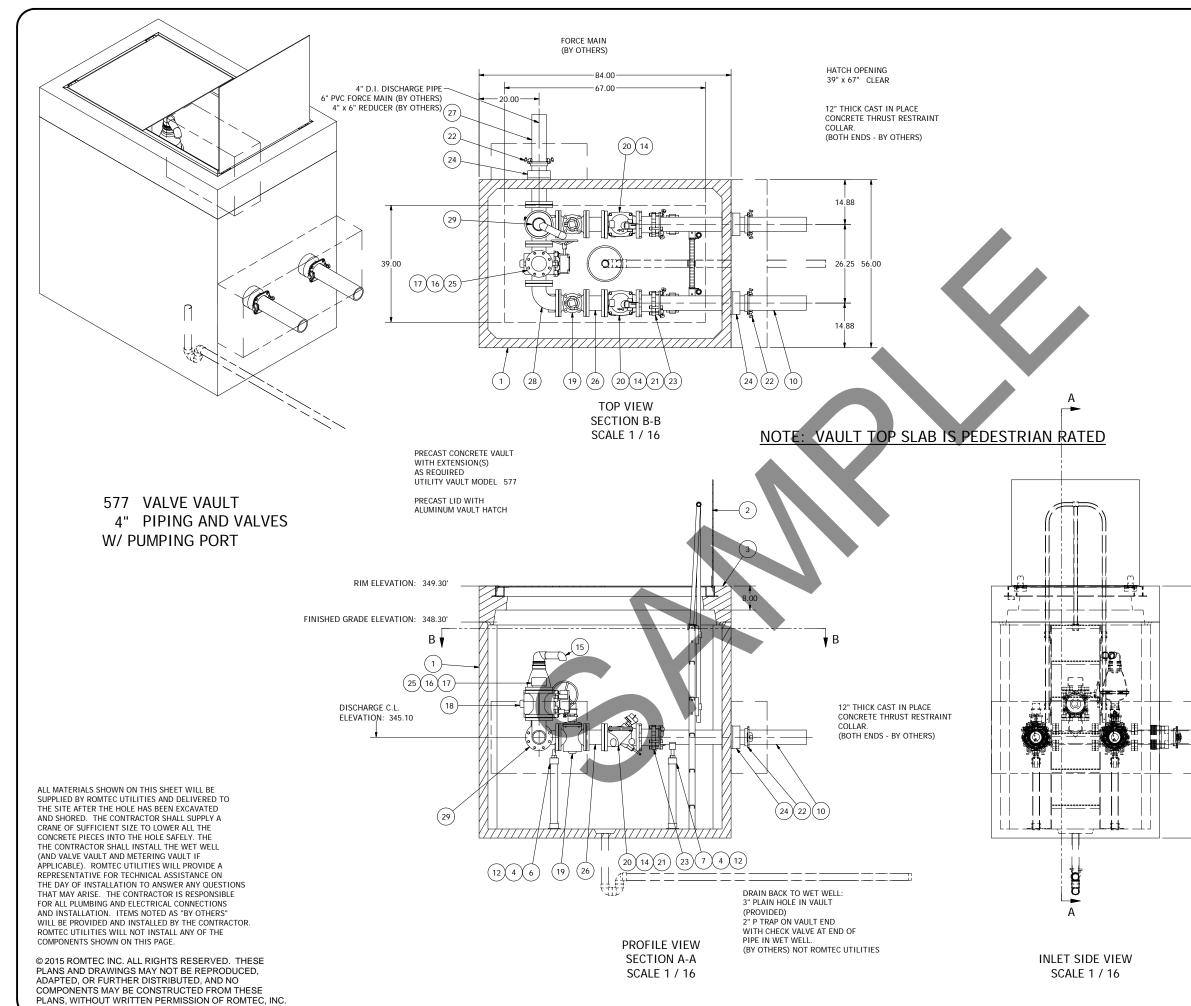

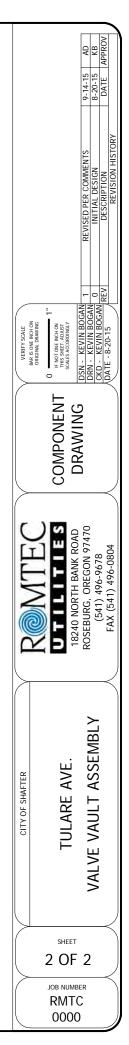



NOTE: ALL DIMENSIONS AND ELEVATIONS SHOWN ARE NOMINAL DIMENSIONS. IT IS THE RESPONSIBILITY OF THE ON-SITE CONTRACTOR OR ROMTEC UTILITIES CUSTOMER (NOT ROMTEC UTILITIES) TO VERIFY THE ACCURACY OF ANY CRITICAL DIMENSIONS OR ELEVATIONS PRIOR TO SETTING OR INSTALLING ANY EQUIPMENT.